


L.B. WHITE HEATER

Thank you for choosing a Camelot heater. Listed below are the instructions for the proper use of the heaters. These heaters are designed primarily for use with a tent and are not intended for indoor use. Heaters should be placed on level ground and have adequate ventilation with no obstructions near the vents.

LENGTH OF USE: With a 10 gallon propane tank you will have approximately an 8 to 10 hour supply of fuel. Rates of fuel usage will vary depending on the difference of warmth you are trying to effect with the outdoor temperature and the cubic footage of the space you are heating. Windy conditions may reduce effectiveness of heaters.

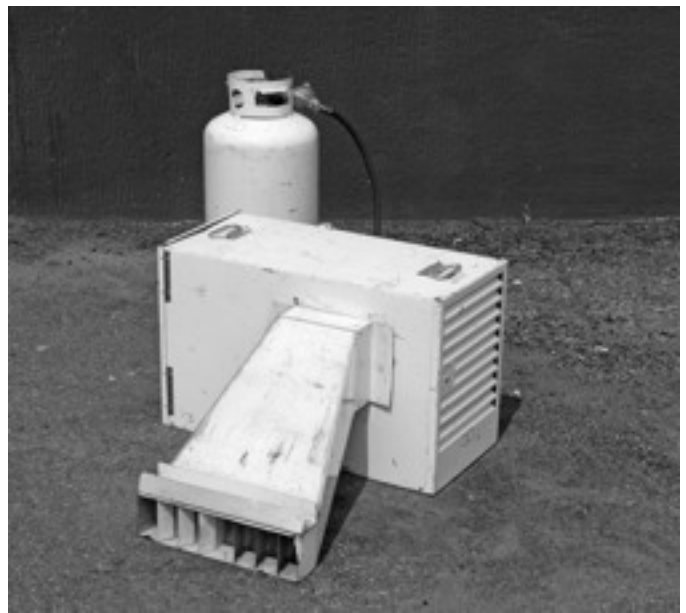

HEATER OPERATION: Once positioned at the place of usage, attach vent to front of heater by inserting hooks into the slots and letting them nestle into place. Attach regulator at end of hose to propane tank nozzle. Please only use a **SMOOTH CRESCENT WRENCH** to tighten regulator to tank. Toothed applicators such as vice grips will wear down nut and make it very difficult to detach regulator. Turn supply valve on top of propane tank to 'OPEN' position. Plug in thermostat to grounded outlet on back of heater and attach to a tent leg about four to five high off of the ground. Connect heater to electrical source at the same point where the thermostat was plugged in and insert cord into a **GROUND**ED outlet. Push the heaters power supply button on the back, bottom of the heater to 'ON' or 'HEAT' and set thermostat to desired temperature. Burner will automatically light. Heater will run until thermostat reaches your desired temperature.



TO SHUT OFF: Turn propane tank valve to 'OFF' position. Allow the heater, for a few moments, to burn off gas remaining in supply line. Turn power switch on heater to 'OFF' and set thermostat to 'OFF'. Disconnect heater from its electrical source. Detach regulator from propane tank nozzle with a crescent wrench. Unhook vent from heater.

IMPORTANT INFORMATION: Use heater only in a well ventilated area and do not obstruct ventilation. Heater is equipped with a manual reset switch that will shut off power to the gas control if unit overheats. Keep propane tank below 100 degrees F. Do not manually light the burner. Red light will be on continually during heater operation and does not indicate that there is a problem unless blinking. **DO NOT WASH UNIT!** Only use unit with grounded electrical equipment. Disconnect unit from any power source before attempting any repairs. Failure to adhere to these instructions can result in injury or death!

POWER NEEDS: 115 Volts; 60 Hz.; 1.5 Amps.



camelotpartyrentals.biz

All heaters are inspected before they go out. If you experience any difficulties or have any questions or concerns, please call us at:

775-355-9004

152 Coney Island Dr. Sparks, NV. 89431