

# PATIO HEATERS



Thank you for choosing a Camelot heater. Listed below are the instructions for proper use of the heaters. Heaters are for **OUTDOOR USE ONLY** and cannot be used inside tents. Depending on wind strength, one heater will cover between an 8' to 15' radius. Multiple heaters grouped together should be spaced between 8' and 12' apart for maximum coverage. Heaters should be used on a level surface.

**LENGTH OF USE:** Heaters will have enough gas for 4 to 6 hours of operation. Windy conditions may reduce effectiveness of heaters.

**HEATER OPERATION:** Attach Reflector Disk to top of Heater Post and insert into base. Lift cylinder cover and attach Regulator to hose and propane tank. Once Regulator is secured, turn propane tank 'ON' and lower cylinder cover. Turn Control Knob to 'PILOT' and push. Hold 'PILOT' button down for about a minute or so to allow gas to funnel up the stem. Push Red Spark Ignition Button to start the heater. Once ignition has begun turn Control Knob to 'ON' and adjust knob to set heat intensity. A lighter can also be used to ignite the pilot by inserting flame into the hole directly above the Control Knob. When done turn Control Knob to 'PILOT', depress, turn to 'OFF' and turn propane tank 'OFF'. Disassemble only after unit is off and has cooled down! Heater and Reflector Disk get extremely hot!

## **IMPORTANT SAFETY RULES:**

- DO NOT** touch heater above the Control Knob area while in operation or immediately after heater is shut-off! Heater and Reflector Disk can get extremely hot! Allow heater to cool down before touching.
- NEVER** hang anything off of a heater. **DO NOT** touch flammable items, including clothing, to the heater above the Control Knob area.
- DO NOT** operate the heater if the Reflector Disk is not attached or if the heater is not fully assembled!
- DO NOT** move the heater while in operation.
- Heaters are for **OUTDOOR USE ONLY**. Heaters cannot be used inside a tent.
- If you smell gas **SHUT OFF** the heater.

**MINIMUM CLEARANCES:** Adequate clearance should be kept from combustible materials. Allow adequate ventilation and air supply at all times. Allow at least a minimum of 4' (48") around the perimeter of the Reflector Disk and 2' (24") above the Reflector Disk. Heaters are 7'9" (93") tall.



[camelotpartyrentals.biz](http://camelotpartyrentals.biz)

All heaters are checked before rental. If you experience any difficulties with a heater or have any questions or concerns please contact us at:

**(775) 355-9004**

152 Coney Island Dr. Sparks, NV. 89431